

Cleaning the cassette ceiling



1
Wear gloves in order to protect you hands from injury.



2
Carefully remove the cassettes from the C-profiles. Only hold the cassettes by the side plates or the small registers.



3
Pull the cassettes that need cleaning towards you and lift them out one after the other until the entire row is empty. (Up to 10 cassettes can be removed at one time.)



4
If the cassettes are very dirty, spray them with a fat-dissolving cleaning agent on both sides.



5
Place the cassettes in the dish-washer basket. After washing, allow the cassettes to dry and remove residual water with a cloth.



6
By spraying the cassettes with a care product they will be extra shiny.



7
Insert the clean cassettes carefully into the C-profiles, linking one to another, and push them away one after the other (max. 10 cassettes) until the row is complete again.



8
If you buy additional cassettes they can be interchanged with dirty cassettes without interrupting the cooking process.